



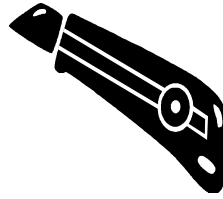

1725 DAVIS STREET
ROCKY MOUNT, NC 27803
PH 252-442-2868
FX 252-442-7412
WWW.RODDOORS.COM

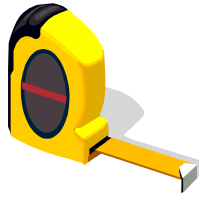

BENCH SEAT INSTALLATION INSTRUCTIONS

1. Remove screws at bottom of the seat back. Pull back panel away from the frame about 2-3 inches and push up (towards top of seat back). The back panel is now removed.
2. Position seat back face to face with seat bottom. Slip hinges through slots sewn in bottom of seat back. Hinges should come through to backside of seat. Attach hinges to bolt studs at frame sides. An old screwdriver can be useful as a pry bar to fineness hinges onto the bolts.
3. Reverse step 1 to attach back panel. Note long plastic clips slide under wire frame.
4. Install slide adjusters as marked. Be sure bell washers are inserted between the seat frame and slide mechanism. Feed adjuster cable through the 3 hog rings at rear of the seat bottom. Insert cable adjuster (provided) with cable through marked hole in slide. Now insert cable and adjust so lever releases both sliders at the same time.
5. Adjust seat back stops. They are located at the rear corners under the frame. Seat back can be adjusted approximately 10 degrees using a 9/16 open-end wrench.
6. Bolt seat pedestals to sliders as marked. Note one leg is longer than the other. If a tilt forward position is your preference put short end to the front.
7. Carefully position seat in cab. Check for position and comfort make changes as needed. Adding a few washers (not included) between the pedestals and the sliders. Adjustment of seat back may be necessary.
8. If you are satisfied with position and comfort you are ready for final installation, the mount. STOP, look things over. Are there any obstacles in the way such as brake lines, fuel lines, electrical, frame rail etc. Drill 5/16" holes and install bolts with fender washers under body. Final adjustments may be necessary due to uneven floor etc.

Thank you for choosing RodDoors, Inc.!!
www.roddoors.com