

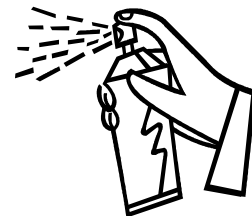


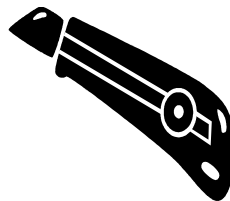

1725 DAVIS STREET
ROCKY MOUNT, NC
27803

PH 252-442-2868
FX 252-442-7412

WWW.RODDOORS.COM

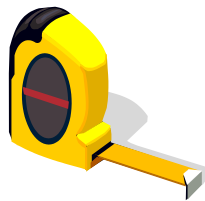

INSTALLATION INSTRUCTIONS 68-69 CHEVROLET CAMARO DOOR PANELS

Tools required: (Not included)

Utility Knife
Straight Edge
Sanding Block (40 grit)
Drill
Contact Spray Cement
Scissors
ABS Pipe Cement

Lay out all pieces: (Included)

2 Door Panels
2 Metal Channels
2 Molded Inserts with Armrests
2 Flat Inserts
2 Armrest Caps
1 Bag Dualloc Tabs (30 Pieces)

2 Yards Fabric for the Field (Not included)
1 Yard Fabric for the inserts (Not Included)
Felt Window Molding (Not Included)

Rough test for fit, do this before proceeding.

- 1) For the '68-'69 model years --From the backside, place the door panels face side down on your work surface (like buttered toast). Test the metal rail for fit. If acceptable, remove the protective strips from the foam adhesive tape and press the metal tight to the upper portion of the door panel.
- 2) Drill through the metal channel for the door lock location, ('68 outside, '69 uses inner hole).
- 3) Drill a 1" hole for the door handle and window crank, (holes are already marked on the panels themselves).

- 4) Layout the fabric over the panel, allowing 3 to 4" extra all around the panel. Fold back the fabric in half. Using a high temperature contact adhesive (RodDoors Spray Glue Cheese or 3M Super 90) spray the back of the fabric and the front of the panel. NOTE: you need to glue only the panel and about 1" into where the insert panel will be attached. Be sure to press hard to get the fabric to fold into the insert recess.
- 5) Wrap the fabric around to the backside, spray gluing as you go and allowing the glue to set up prior to pressing the fabric tight to the panel. At the top of the panel wrap the fabric around and over the metal channel. Trim any excess. No one will see your work, but now is a good time to trim away any bulky or extra bunched material. Again this may never be seen by anyone else, but good habits never hurt anyone.
- 6) Cut away that area on the panel where the insert panel will go. DON'T get too carried away here. Trim the material only to within an inch of the edge of the insert.
- 7) Cover the molded inserts panel, and the flat insert panel, and armrest cap, just like we did before, trimming away any extra material.
- 8) Using ABS pipe cement, glue the insert to the panel being extra careful not to drip cement across the newly covered panel. REMEMBER we are gluing only the ABS to the ABS here, Repeat with Flat Insert, and Armrest Cap.
- 9) Install panel onto the door using Dualloc Tape provided in the installation kit.

THAT'S IT! If you want to add more zip, do other things like carpeting the bottom; see our video for more details.

Thank you for choosing RodDoors, Inc.!!!
www.roddoors.com