




1725 DAVIS STREET
ROCKY MOUNT, NC 27803
PH 252-442-2868
FX 252-442-7412
WWW.RODDOORS.COM

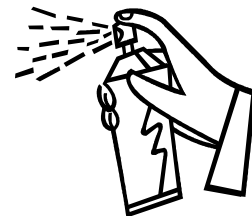

INSTALLATION INSTRUCTIONS '55 -'57 CHEVROLET SEDAN TRUNK PANEL

Tools required: (Not included)

Utility Knife
ABS Pipe Glue
Tape Measure
1-Can Spray Adhesive
Sanding Block (80 grit)

Lay out all pieces: (Included)

2 ABS Pre-cut Side Pieces
1 ABS Center Panel 44"x 32"
1 One Bag (30pc) Dualloc Tabs

- 1) Clear a work area; install any carpet or rubber pad that is desired onto the floor of the trunk.
- 2) Test fit the center panel (directly against the back of the rear seat).
- 3) Test each corner for fit to ensure that the corners are correct. Slide each side panel under the lip along the edge of the trunk. If keeping the original spare tire you will have to trim the passenger side panel as marked to allow the panel to fit over the original support brace.
- 4) Apply Dualloc Tabs every 6-8" on the backside of each panel and install the panels in the truck.
- 5) Once you're happy with the fit, you're ready to upholster the cover with fabric. To ensure the entire panel is covered, allow 2 extra inches of fabric around the entire panel. Use only a high temp contact spray adhesive (RodDoors Spray Glue Cheese or 3M Super 90). Start in the center: spray both the back of the fabric and front of the panel, 2 square feet at a time. Take your time. If the fabric has a grain or a pattern keep it straight on the center of the panel.
- 6) On the back of the panel, glue the fabric over the edge tape and trim to within 1/2"-3/4" of the edge.
- 7) Re-install the panel into the car and press in place.

Thank you for choosing RodDoors, Inc. !!
www.roddoors.com