

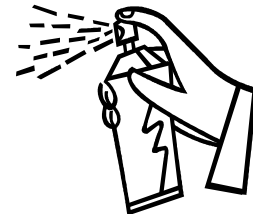


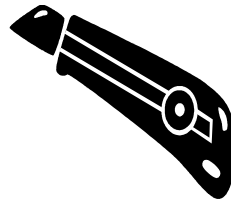

1725 DAVIS STREET
ROCKY MOUNT, NC
27803
PH 252-442-2868
FX 252-442-7412
WWW.RODDOORS.COM

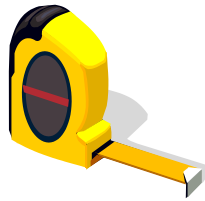

INSTALLATION INSTRUCTIONS

'60 - '66 Chevy Truck THE KATO/FENNIMAN

DOOR PANEL ATTACHMENT BRACKETS

Tools required: (Not included)

UTILITY KNIFE
ABS PIPE GLUE
SANDING BLOCK (80 GRIT)

LAY OUT ALL PIECES INCLUDED:

- 4 PRE-TRIMMED ATTACHMENT BRACKETS
- 2 PRE-TRIMMED DOOR PANELS
- 1 PRE-TRIMMED INSTALLATION KIT.

DUE TO THE DESIGN OF THE PANEL AND THE SHAPE OF THE DOOR, THE PANEL IS RAISED TOO FAR OFF THE DOOR TO ALLOW THE DUALLOC TAPE TO DO ITS JOB. DUE TO THE OUTWARD PRESSURE RESULTING FROM THIS, PRESSING THE PANEL TIGHT TO THE DOOR WILL ONLY RESULT IN A TEMPORARY HOLD. THE SIMPLE SOLUTION IS TO GLUE THE ATTACHMENT BRACKETS WE PROVIDE TO THE BACK OF THE PANEL. **THESE BRACKETS ARE TO BE GLUED ON WITH A.B.S. PIPE GLUE.**

THE PROPER LOCATION FOR ATTACHMENT BRACKETS.

BRACKETS ARE GLUED TO THE BACK (SMOOTH SIDE) OF EACH DOOR PANEL IN TWO LOCATIONS:

- (1) ALONG THE VERTICAL EDGE OF THE PANEL IN THE MIDDLE BELOW THE ARMREST, WITH THE RAISED PART OF THE BRACKET AIMED TOWARD THE CENTER OF THE PANEL.
- (2) ALONG THE VERTICAL EDGE IN FRONT, IN THE MIDDLE OF THE PANEL, WITH THE RAISED PART OF THE BRACKET FACING THE CENTER OF THE PANEL.

APPLY FOUR PIECES OF DUALLOC TABS TO THE BACK OF THE BRACKET, (TEXTURE SIDE).

TEST FOR FIT. IF PROPERLY INSTALLED THE TOP OF THE TAB WILL BE JUST SLIGHTLY BELOW THE EDGE OF THE PANEL

ON THE BACK "SMOOTH" SIDE THE PANEL, GLUE THE BRACKETS TO THE PANEL. ONCE GLUE HAS DRIED (1-24 HOURS), ATTACH THE PANEL TO THE DOOR WITH MORE DUALLOC TABS AND PRESS IN PLACE.

THANK YOU FOR CHOOSING RODDOORS, INC.!!

WWW.RODDOORS.COM