



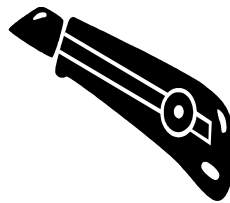

1725 DAVIS STREET
ROCKY MOUNT, NC 27803
PH 252-442-2868
FX 252-442-7412
WWW.RODDOORS.COM

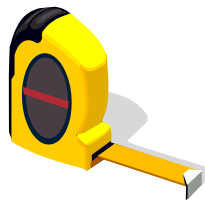

Installation Instructions '67-'72 Chevy Truck The Dano Headliner

Tools required: (Not included)

- 1 Can Contact Cement Spray Glue

Lay out all pieces: (Included)

- 1 Dano headliner
- 1 Liquid Nails
- 1 Pre-trim Installation kit

Clear a workspace and assemble all tools needed to complete the installation.

1) After testing for fit, you're ready to upholster the headliner with fabric. To ensure the entire panel is covered, allow 2 extra inches of fabric around the entire panel. Use only a high temp. Contact spray adhesive (RodDoors Spray Glue Cheese or 3M Super 90). Start in the center: spray both the back of the fabric and front of the panel, 2 square feet at a time. Take your time. If the fabric has a grain or a pattern keep it straight on the center of the panel.

2) Any wrinkles can be removed by lifting the fabric away from the panel and re-gluing the panel and fabric; working the fabric in a different direction the next time.



Note:

Use all Dualloc tabs provided in the installation kit.

3) Peel off the red liner from the Dualloc Tab and stick in place on the headliner (10-15 pieces) in the center and the remaining pieces along the edge inner lip of the panel. Press headliner on to the roof; use a piece of PVC pipe to hold it in place for a couple of hours until everything cures.

Thank you for choosing RodDoors, Inc.!!!

www.roddoors.com