



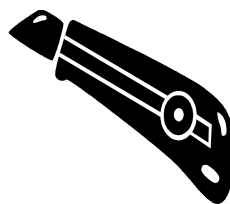

1725 DAVIS STREET
ROCKY MOUNT, NC 27803
PH 252-442-2868
FX 252-4427412
WWW.RODDOORS.COM

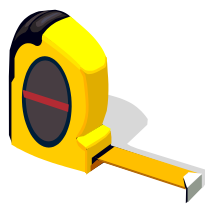

INSTALLATION INSTRUCTIONS '67-'72 Chevy Truck

THE DANO REAR CAB COVER

TOOLS REQUIRED: (NOT INCLUDED)

Utility Knife
ABS Pipe Glue
Tape Measure
1-Can Spray Adhesive
Sanding Block (80 grit)

LAY OUT ALL PIECES: (INCLUDED)

- 2 Pre-trimmed Corner pieces; (passenger side & driver side)
- 1 Pre-trimmed ABS Center Panel
- 2 ABS plastic glue strips 26" x 4"
- 1 Roll Edge Tape
- 1 Bag Dualloc Tabs (30)

Clear a workspace and assemble all tools needed to complete the installation.

- 1) Test each corner for fit to insure that the corners are correct.
- 2) Depending on the carpet height, trim the bottom of the rear Cab pieces with either a utility knife or tin snips.
- 3) On the back "smooth" side of the cover, glue the corners to the center section with ABS pipe glue (not included) using the 4" glue strips in the kit. When gluing the strips to the back don't run the strip to the top of the panel. Let the strip end 1/2" from the top on the backside of the panel. This will allow you to run the Foam Edge Tape all the way around the top of the Cover. Be sure to properly support the panels on a flat surface while the glue dries. Use lots of weights to keep the pieces flat until the glue dries, 1-24 hours (the longer the better).
- 4) After the glue has set, remove the weights and block sand the glue joint until it is smooth and level. Sometimes we'll apply an additional coat of glue to fill in any holes. Let dry and sand smooth. (Another case of "More is Better").

- 5) Apply the Foam Edge Tape to the backside of the cover along the top edge only. The two sides of the corner pieces will be slipped under the rubber that runs along the doorframe.
- 6) After testing for fit, you're ready to upholster the cover with fabric. To ensure the entire panel is covered, allow 2 extra inches of fabric around the entire panel. Use only a high temp contact spray adhesive (RodDoors Spray Glue Cheese or 3M Super 90). Start in the center: spray both the back of the fabric and front of the panel—2 square feet at a time. Take your time. If the fabric has a grain or a pattern keep it straight on the center of the panel.
- 7) On the back of the panel, glue the fabric over the edge tape and trim to within 1/2"-3/4" of the edge.

INSTALLING THE PANEL INTO THE TRUCK:

Note: The bottom corners of your Rear Cab Cover make an excellent place for installing speakers.

- 8) Use Dualloc Tabs (included in the installation kit) every 6-8" along the top and the bottom rear of the cab. Test for fit and install the cover into the car

Thank you for choosing RodDoors, Inc.!!!
www.roddoors.com