



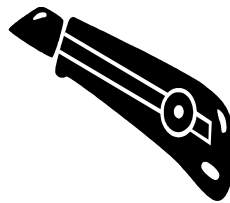

1725 DAVIS STREET  
ROCKY MOUNT, NC  
27803  
PH 252-442-2868  
FX 252-442-7412  
[WWW.RODDOORS.COM](http://WWW.RODDOORS.COM)

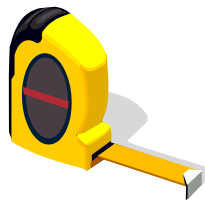

## INSTALLATION INSTRUCTIONS

### '73-'87 CHEVROLET TRUCK REAR CAB COVER

#### **Tools Required: (Not included)**

Utility Knife  
Sanding Block (40 grit)  
1 Bag Dualloc Tabs (???) Pieces)

#### **Lay out all pieces: (Included)**

1— Rear Cab Cover Center section 73-87 Chevrolet  
1-- Universal installation kit  
1 –Pair Rear Cab Cover corners '73-87 Chevrolet

1) Test fit each corner and the center section first to ensure that the corners are properly sized before doing anything else. That way the product it can still be returned to us. **If modified in any manner we cannot accept the products back nor issue a credit.**

2) WITH ALL PANELS ASSEMBLED AND IN THE TRUCK, it may be necessary to scribe the corners and the center along the bottom depending on carpet height. Trim the excess off the corners and the center section, use a utility knife. Test for fit. Using a sanding block with 40 grit sandpaper block sand all edges smooth.

3) Apply the Foam Edge Tape to the Backside of the cover at the top edge and down the sides ON THE BACK EDGE ONLY.

4) Use additional Dualloc Tabs every 6"-8", test for fit and install the cover in the truck. If any gaps are present use additional Foam Edge Tape to fill in those gaps. Protrusions can be handled by carving away the Foam in that area.

5) Once you're happy with the fit, you're ready to upholster the cover with fabric. To ensure the entire panel is covered, allow 2 extra inches around the entire panel. Use only a high temp contact spray adhesive (Rod Doors Spray Glue Cheese or 3M Super 90). Start in the center: spray both the back of the fabric and the front of the panel—2 square feet at a time. Take your time. If the fabric has a grain or a pattern keep it straight on the center of the panel.

6) On the back of the panel, glue the fabric over the edge tape and trim to within  $\frac{1}{2}$ "– $\frac{3}{4}$ " of the edge.

7) Reinstall the panel in the truck, press in place.

**Thank you for choosing RodDoors, Inc.!!! [www.roddoors.com](http://www.roddoors.com)**