


SUNVISOR TEMPLATE 1947-53 CHEVY/GMC TRUCKS

SUNVISOR INSTALLATION

- ❖ AFTER YOU ARE SATISFIED WITH THE WAY THE HEADLINER FITS, LOCATE AND MARK THE LARGE HOLE FOR THE SUN VISOR MOUNTING BRACKETS USING THE TEMPLATE SUPPLIED. **HINT: COVER THE LEATHER-GRAINED SURFACE OF THE HEADLINER WITH MASKING TAPE WHERE THE SUNVISOR BRACKETS WILL BE LOCATED. THIS WILL PROTECT THE SURFACE FROM SCRATCHES AND MAKE MARKING THE HOLES EASIER.**
- ❖ WITH THE HEADLINER OUT OF THE CAB, POSITION THE TEMPLATE ON THE FRONT CORNER OF THE HEADLINER WITH THE SIDE MARKED **DOOR EDGE** ALONG THE DOOR TRIM LINE EDGE. THE SIDE MARKED **WINDSHIELD EDGE** SHOULD BE POSITIONED AGAINST THE WINDSHIELD EDGE OF THE HEADLINER. **MARK AND DRILL HOLES. TURN THE TEMPLATE OVER TO MARK AND DRILL PASSENGER SIDE SUNVISOR. REINSTALL THE HEADLINER AND SUNVISORS.**

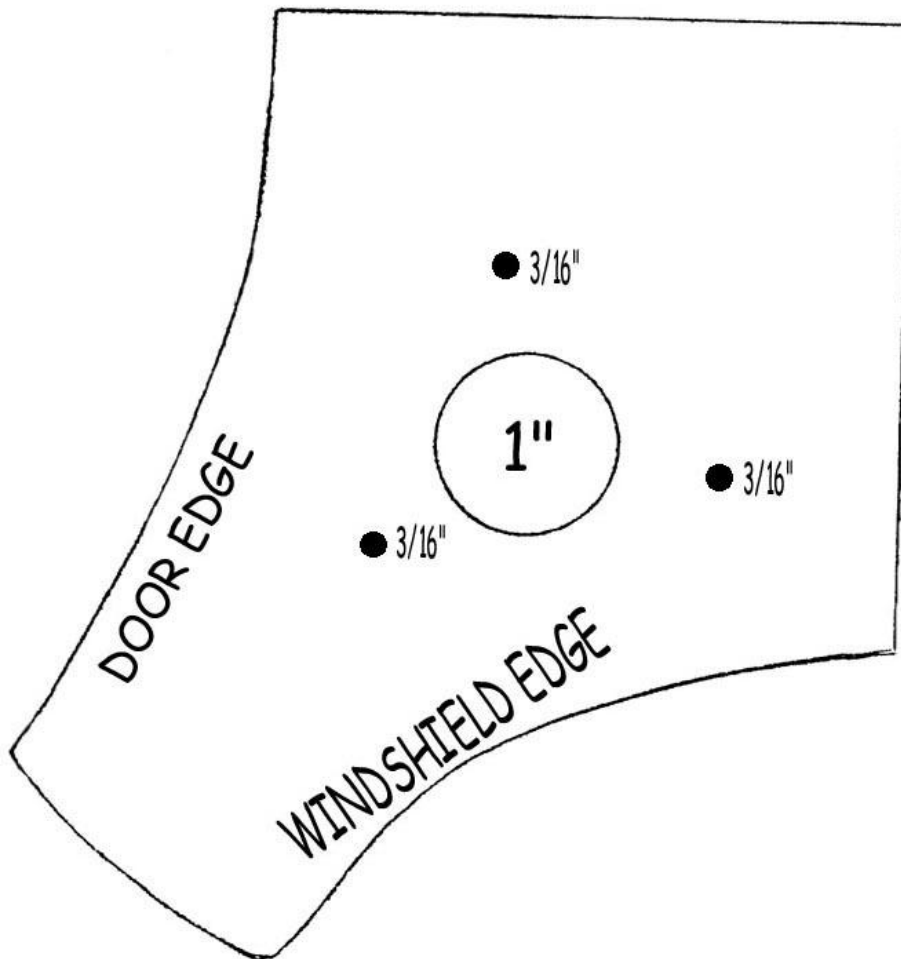

SUNVISOR TEMPLATE 1954-55 CHEVY/GMC TRUCKS

SUNVISOR INSTALLATION

- ❖ AFTER YOU ARE SATISFIED WITH THE WAY THE HEADLINER FITS, LOCATE AND MARK THE LARGE HOLE FOR THE SUN VISOR MOUNTING BRACKETS USING THE TEMPLATE SUPPLIED. **HINT: COVER THE LEATHER-GRAINED SURFACE OF THE HEADLINER WITH MASKING TAPE WHERE THE SUNVISOR BRACKETS WILL BE LOCATED. THIS WILL PROTECT THE SURFACE FROM SCRATCHES AND MAKE MARKING THE HOLES EASIER.**
- ❖ WITH THE HEADLINER OUT OF THE CAB, POSITION THE TEMPLATE ON THE FRONT CORNER OF THE HEADLINER WITH THE SIDE MARKED **DOOR EDGE** ALONG THE DOOR TRIM LINE EDGE. THE SIDE MARKED **WINDSHIELD EDGE** SHOULD BE POSITIONED AGAINST THE WINDSHIELD EDGE OF THE HEADLINER. **MARK AND DRILL HOLES. TURN THE TEMPLATE OVER TO MARK AND DRILL PASSENGER SIDE SUNVISOR. REINSTALL THE HEADLINER AND SUNVISORS.**