




1725 DAVIS STREET  
ROCKY MOUNT, NC 27803  
PH 252-442-2868  
FX 252-442-7412  
[WWW.RODDOORS.COM](http://WWW.RODDOORS.COM)

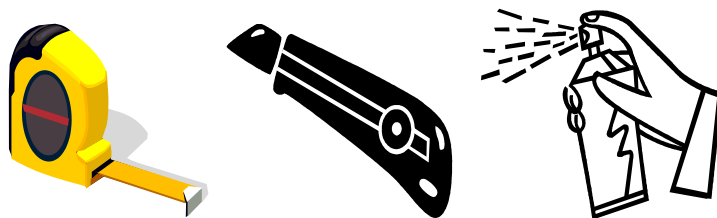

## Installation Instructions

### HIDE-A-VENT

#### **Tools required: (Not included)**

Utility Knife  
ABS Pipe Glue  
Tape Measure  
1 Can Spray Adhesive  
Sanding Block (80 grit)

#### **Lay out all pieces: (Included)**

1 AC Vent  
1 Template for marking the opening on the Underdash Cover  
1 Panel finish cover

**Stop! Your new Hide-A-Vents were specifically designed to be installed in the RodDoors Underdash Cover.**

If not already having done so, purchase one from RodDoors today! Many tears have been shed in the attempts of adapting Hide-A-Vents to original stock equipment.

Start by clearing a workspace and assembling all tools needed to complete the installation. Dismount any switches, vents, brackets, radios, or anything else that would interfere with the installation of the Hide-A-Vents.

- 1) The first step is measuring and marking the Underdash Cover for the vent openings to accommodate your Hide-A-Vents.
- 2) Once you have determined their locations for your particular situation, use the templates supplied to mark the openings on the Underdash Cover.

**Option#1-** Once marked, use the utility knife to scribe the lines and make an X from corner to corner. This will give you four triangular pieces, which when bent inward to break, will leave a clean opening that should then be sanded smooth for a clean, finished look.

**Option#2-** Drill hole in one corner of scribed pattern, then with a pair of pliers, break off in one piece.

3) Test fit the vent to ensure there are no obstacles in the way, allowing the vent hose to flex. Underdash cover should be fitted as well to accommodate such obstacles as the glove box etc. Any minor adjustments can and should be made at this point.

4) The next step is attaching the AC Vents to the backside of the Underdash Cover. This can be done using ABS Pipe Glue or Double-Sided Dualloc Tabs, both of which are available for purchase from RodDoors.

5) The only task left, before throwing together the whole enchilada, under your dash is attaching the Panel Finish Covers to the vent door assemblies. Again, this can be done with either the Dualloc Tabs or the ABS Glue. Upholster the Underdash with the material of your choice, using the contact spray adhesive (RodDoors Spray Glue Cheese or 3M Super 90).

Putting it all Together! Finally, it's time to install your new and improved Underdash system into the vehicle using self-adhesive Dualloc tabs (Included in the Installation Kit). This attaches the panel to the mounting brackets, and allows easy removal of the panel in the event of needed underdash work in the future .

**Thank you for choosing RodDoors, Inc.!!**  
**[www.roddoors.com](http://www.roddoors.com)**