

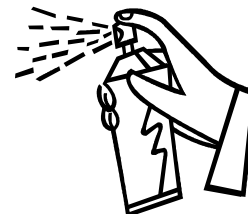


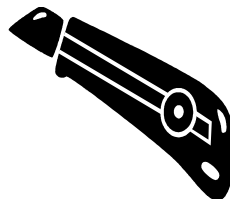

1725 DAVIS STREET
 ROCKY MOUNT, NC 27803
 PH 252-442-2868
 FX 252-442-7412
WWW.RODDOORS.COM

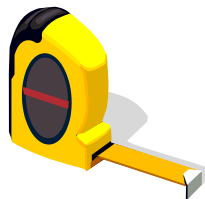

Installation Instructions UNDERDASH PACKAGE TRAY

Tools required: (Not included)

- Utility Knife
- Pliers
- Tin Snips
- Tape Measure
- Drill (1/8" drill bit)
- ABS Pipe Glue
- 1 Can Contact Cement Spray Glue
- Sanding Block (80 grit paper)

Lay out all pieces: (Included)

- 1 Underdash Package Tray (Top portion & Bottom portion)

Note: Although adaptations can be made for your under dash package tray to fit stock equipment or other alternate sources, these instructions are intended for the installation of your package tray into a RodDoors Underdash Cover.

Start by clearing a workspace and assembling all tools needed to complete the installation. Dismount any switches, vents, brackets, radios, or anything else that would interfere with the installation of the underdash package tray.

- 1) The first step is measuring and marking the underdash cover for the opening that will accommodate the package tray. Drill a hole in one corner of the scribed pattern you made with a utility knife on the Underdash, then with a pair of pliers, break off in one piece.
- 2) Test fit the package tray to the Underdash Cover to ensure there are no obstacles in the way. Any minor adjustments can and should be made at this point.
- 3) Upholstering

A) Top Portion: Attach the fabric to the interior top portion of the package tray with a contact spray adhesive (RodDoors Spray Glue Cheese or 3M Super 90). Spraying both the interior and the back of the fabric let the glue set up for at least 10 minutes and then, pressing the two together, cover the whole interior. When glue has dried, trim excess material around outer part of the first lip, leaving the 3/4" border free of material to give a clean finished look when attaching to the bottom portion of the package tray.

B) Bottom Portion: Attach the fabric to the exterior, bottom portion of your package tray, again using a contact spray adhesive. Spraying both the exterior and the back of the fabric, let the glue set up for at least 10 minutes. Then pressing the two together, cover entirely, pocket opening and all. Now, spray the interior and the back of a new piece of material and let dry for 10 minutes. Cut a slot in the covered opening from end to end. At each of these two ends, approx. 1" up the initial cut, make two additional cuts on both sides at an angle from the initial slot to the edge of the pocket opening, creating two, star-like points of fabric at each end of the openings that will be folded over the interior pocket lip. With a utility knife, trim around this inner lip edge of the opening, removing any excess material, but still covering the lip. Now, with the new piece of fabric already sprayed, press on to the interior of the interior of the package tray, working with the new fabric and removing any unwanted wrinkles. Cover the pocket opening as done when upholstering the exterior. After the glue has dried, use your utility knife to trim off only the new material covering the opening. Cut along the same edge you trimmed when upholstering the external portion. This should give the interior of your package tray a clean finished look. Now, trim material around the base lip, that in the next step will be attached to the top portion of the Underdash tray, (again, making certain to leave $\frac{3}{4}$ " of the border to avoid gaps.)

4) Attach the top portion of the package tray to the bottom portion using rivets, screws, or ABS Cement.

5) Throwing it all Together!

The next step is attaching the Underdash Package Tray to the backside of the Underdash. This can be done using ABS Pipe Glue or Double-Sided Dualloc Tabs, both of which are available for purchase from RodDoors. Finally, reinstall the Underdash back to its original fitting.

Thank you for choosing RodDoors, Inc.!!

www.roddoors.com