

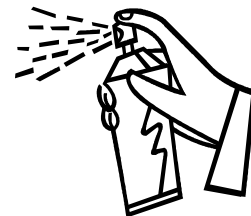


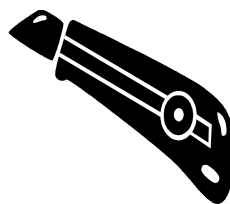

1725 DAVIS STREET
ROCKY MOUNT, NC 27803
PH 252-442-2868
FX 252-442-7412
WWW.RODDOORS.COM

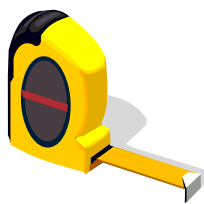

INSTALLATION INSTRUCTIONS UNDERDASH RADIO MOUNT

Tools required: (Not included)

Utility Knife
Pliers
Tin Snips
Tape Measure
Drill (1/8" drill bit)
ABS Pipe Glue
1-Can Contact Cement Spray Glue
Sanding Block (80 grit paper)

Lay out all pieces: (Included)

1 Underdash Radio Mount

Note: Although adaptations can be made to your radio mount to fit stock equipment or other alternate sources, **these instructions are intended for the installation of the radio mount into a RodDoors Underdash Cover.**

Clear a workspace and assemble all tools needed to complete the installation. Dismount any switches, vents, brackets, radios or anything that would interfere with the installation of the radio Mount.

1) The first step is measuring and marking the Underdash Cover for the opening that will accommodate the radio mount. Drill a hole in one corner of the scribed pattern you made with a utility knife on the Underdash. Then with a pair of pliers, break off in one piece.

2) Next, measure and mark the radio mount itself for the opening in which the radio will be placed, again, using the same method used in step #1 for marking and breaking off the plastic. Make the opening 1/8" larger to accommodate the thickness of the fabric.

3) Test fit the radio mount to the Underdash Cover to ensure there are no obstacles in the way, and that any wiring needed to be done will be accessible. Any minor adjustments can and should be made at this point. .
Now is the time to mark and drill holes in radio mount for any wiring, if necessary.

4) Attach the fabric to the Underdash Radio Mount with a contact spray adhesive (RodDoors Spray Glue Cheese or 3M Super 90). Spraying both the front of the radio mount and the back of the fabric let the glue set up for at least 10 minutes and then, pressing the two together, cover the entire front of the radio mount, opening and all. After glue has dried, trim a flush opening for the radio. Also, trim material around the base of the exterior hump. (Leaving this ½" ledge of the radio mount un-upholstered will prevent any gaps from occurring when it comes time to install and will give your door panel a more clean finished look.)

5) The next step is attaching the radio mount to the backside of the Underdash. This can be done using ABS Pipe Glue or Double-Sided Dualloc Tape, both of which are available for purchase from RodDoors.

6) Throwing it all Together!

Finally, having installed your radio mount in a RodDoors Underdash Cover reinstall the Underdash back to its original fitting, mount your stereo and run your stereo wires accordingly.

Thank you for choosing RodDoors, Inc.!!

www.roddoors.com